


How to check the machine serial (NT SmartX)

The machine serial is printed on the nameplate of the NT SmartX control panel.

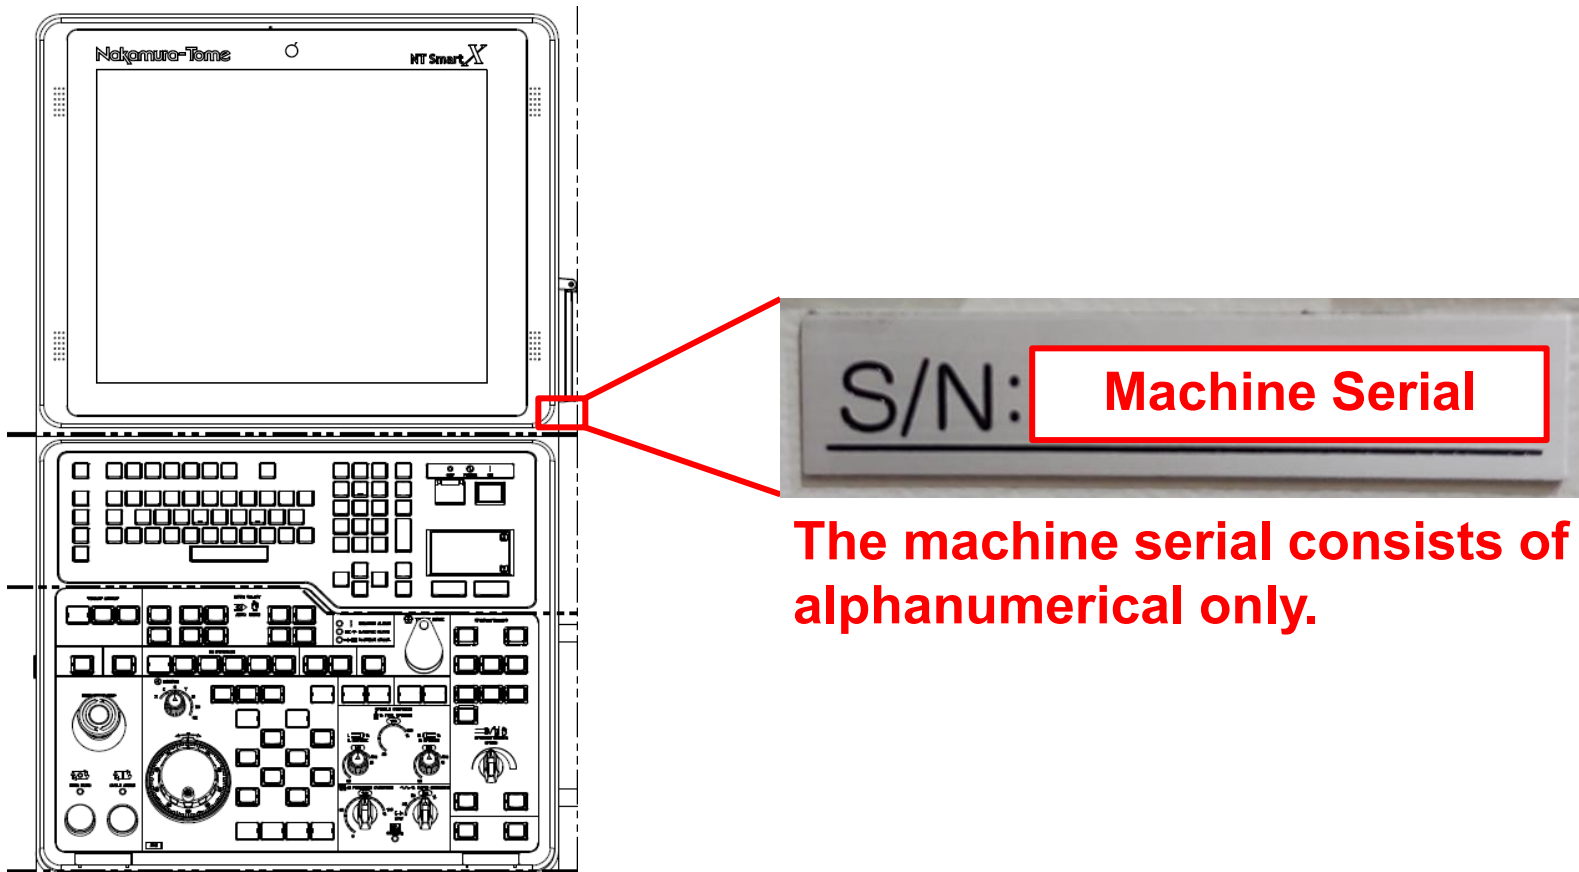

The machine serial consists of alphanumerical only.

How to check the machine serial (NT SmartXs)

The machine serial is printed on the nameplate at the lower left of the machine door.



The machine serial consists of alphanumerical only.