


# How to check the machine serial

The machine serial is printed on the nameplate of the NT Smart X control panel.

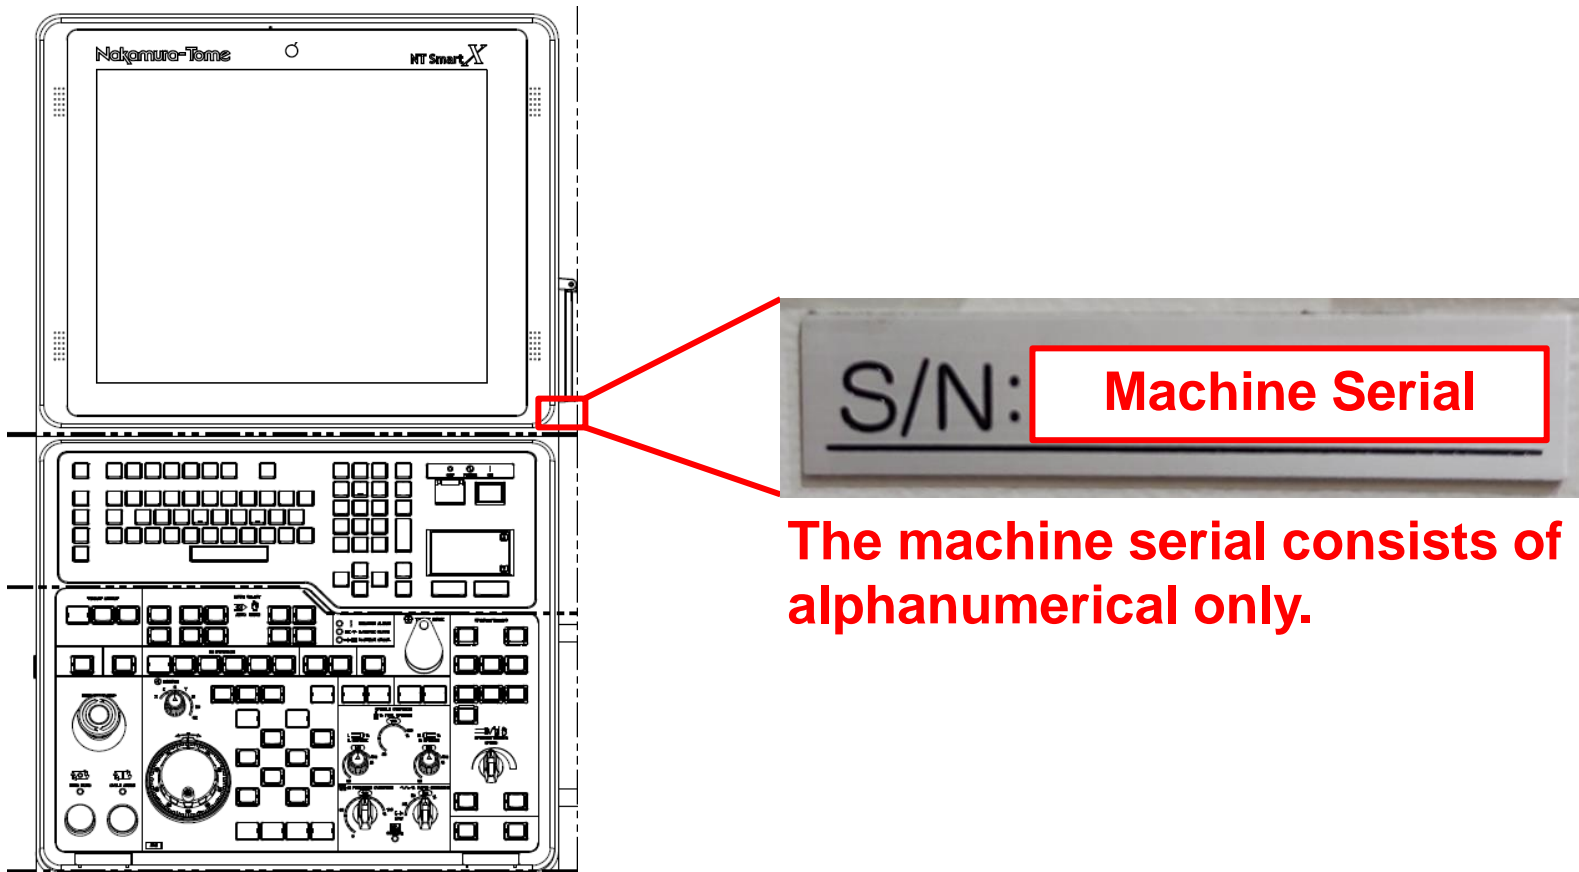

**The machine serial consists of alphanumerical only.**