


How to check the machine serial

The machine serial is printed on the nameplate of the NT SmartX control panel.

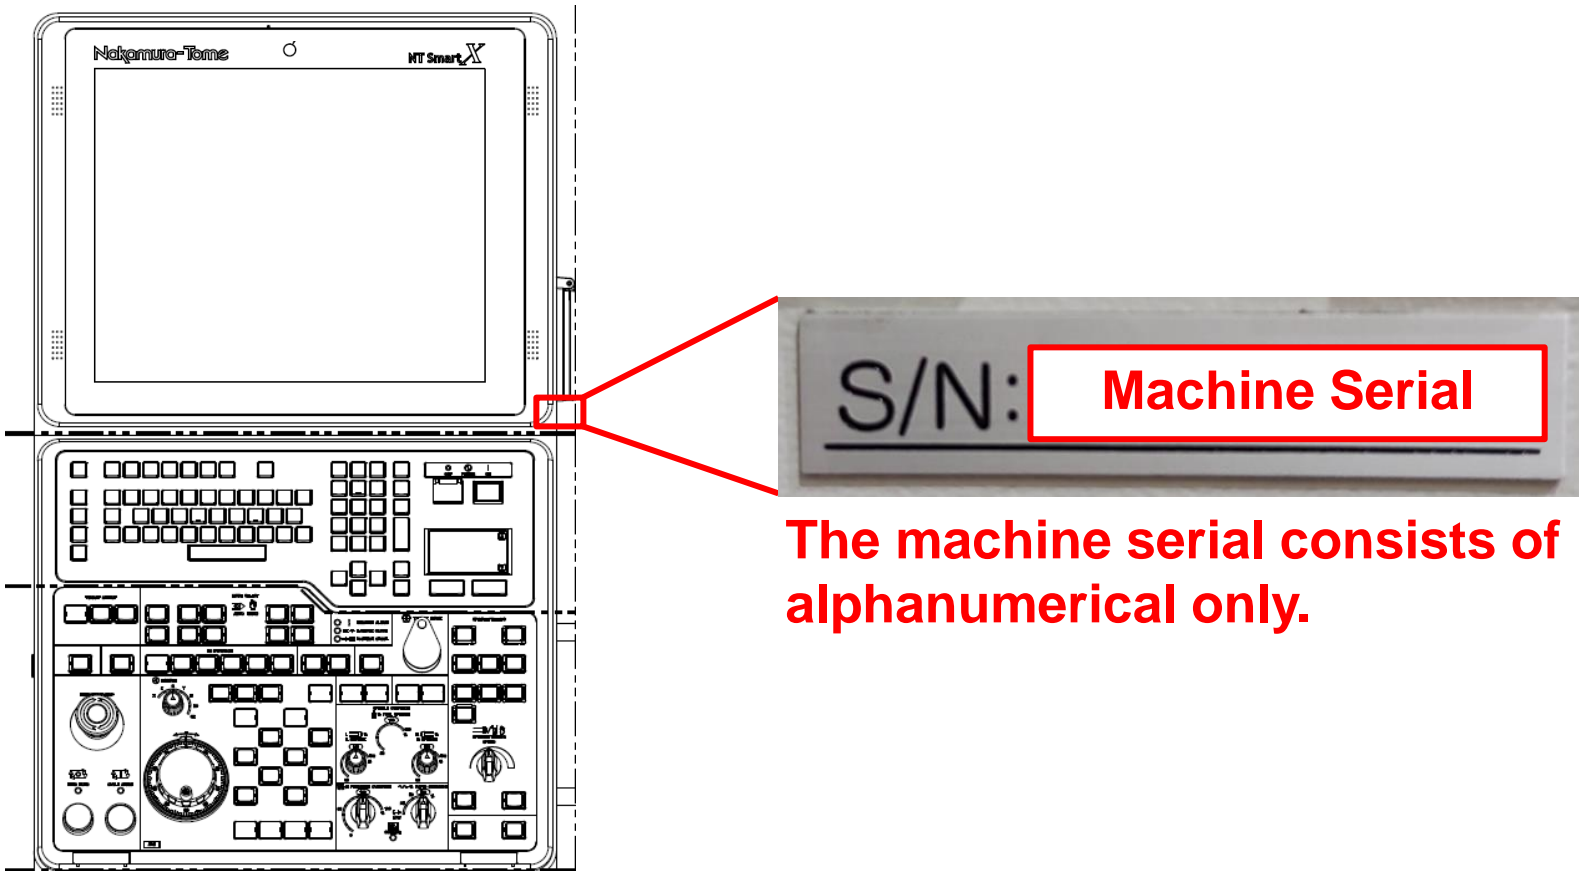

The machine serial consists of alphanumerical only.